



Groups F and G Cleanroom Compatible Dust (Combustible and Toxic/Nuisance)
IIIB Cleanroom Compatible Dust (Combustible and Toxic/Nuisance)



DUST IGNITION PROTECTED

CLEANING MACHINES For Hazardous Locations (Classes C1618 01 & C1618 81)

Division 2, Class II, Groups F and G

ESD Safe Vacuum Systems for Hazardous Locations are designed to prevent ignition hazards.
We use metal parts or Static Dissipative Powder Coating to prevent Electrostatic Discharge (ESD)



Complies with NFPA 77 "Recommended Practice on Static Electricity"



IECEX 3rd Party Certified

External: Ex h tc IIIC T200°C Dc IP6X

Internal: Ex h IIIC T200°C Da

IECEX LCIE 15.0048

Characteristics



ULPA - Included



High Filtration Efficiency Unit



Static Dissipating



Stainless General



SD Accessories - Included



Dry Recovery



- Ideal for housekeeping and general cleaning
- 5-stage filtration system, includes dual ULPA filters (U15) (one for the working air and one for the cooling air), double cloth filter, and disposable filter bags
- Available with a Middle Ring with Activated Carbon (MRAC) for the adsorption of toxic/noxious fumes and vapors
- Heavy duty 2-stage by-pass motor
- Brushless BLSD motor available upon request
- Material to be recovered within a conductive cloth recovery bag
- Equipped with a filter blockage indicator light to know when the recovery bag is full
- Autoclavable recovery tank made of stainless steel Type 316 - electropolished
- Powerhead made of stainless steel Type 304 (not autoclavable)
- Includes a complete tool kit.

Specifications

C-10 EX (4W) STAINLESS STEEL ULPA	110540A	110540A-BLSD
Model Name	C-10 EX (4W) STAINLESS STEEL ULPA	C-10 EX (4W) STAINLESS STEEL ULPA BLSD
Type	Electric	Electric
Tension	120 V	120 V
Frequency	60 Hz	60 Hz
Phase	Single	Single
Wattage	1207 W	1100 W
Power	1.6 HP	1.5 HP
Amperage	10.5 A	13 A
Air Flow	110 CFM	127 CFM
Vacuum Pressure	107 " H ₂ O	89 " H ₂ O
Sound Level	75 dB(A)	75 dB(A)
Type of Power Outlet	120V	120V
Suction Inlet Port	2 "	2 "
Cart Type	4 Wheel Dolly (4W)	4 Wheel Dolly (4W)
Filter Cleaning	None	None
Dry Recovery - Disposable Filter Bag	5 gal.	5 gal.
Length	19 "	19 "
Width	18 "	18 "
Height	34.5 "	34.5 "
Weight (Vacuum Only)	66 lb.	66 lb.
Cord Length	35 ft.	35 ft.

Please note that specifications are subject to change without notice


Use only recommended tools & accessories



Conductive Recovery Bags - included



CWR EX Tools and Accessories - Included

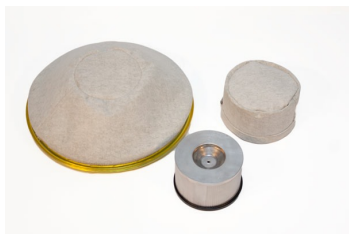

Static Dissipative Main Filter, Safety Filter and HEPA Filter - Included